



CHOIR RISER

CR1.22M3

USER MANUAL



For safety, please read this user manual carefully before initial use.

Event Lighting reserves the right to revise the manual at any time. Information and specifications within this manual are subject to change without notice. Event Lighting assumes no liability or responsibility for any errors or omissions. Please consult Event Lighting for any clarification or information regarding this item.

CONTENTS

Safety Instructions	2
Product Assembly	3
Load Ratings	4
Specifications	4
Warranty.....	4

The following guide helps improve safety, ensure a secure and stable assembly of the stage deck. Always inspect connections and stability before use.

Safety Instructions

WARNING

- **Observe Load Capacity:** Do not exceed the recommended load limits to prevent structural collapse.
- **Inspect Components:** Ensure all components are undamaged before use. Bent, broken, or cracked parts compromise safety and should be replaced immediately.
- **Authorized Parts Only:** Only use parts supplied by Event Lighting. Unauthorized substitutes may not fit properly or may fail under stress.
- **Avoid Modifications:** Never bend, cut, or alter the unit's structure. Modifications weaken the riser and increase the risk of collapse.
- **Safety Accessories:** Determine whether additional safety features, such as handrails, are necessary for your specific setup
- **Secure measures:** Always ensure that all casters are securely locked before folding or unfolding the unit.
- **Be cautious of moving parts:** The unit contains moving parts that can pose a risk of harm or damage. Ensure that hands, fingers, or other objects are not in the path of these moving parts during operation.

Product Setup Instructions

1. Unfolding the unit:

1.1. Position the Unit:

- While the product is in its folded upright position, unlock the casters and carefully move the unit to the desired installation location.
- Ensure the surface is flat and level to maintain stability.

1.2. Lock the Casters:

- Once the unit is positioned, lock all casters to prevent unintended movement during setup.

1.3. Release the Frame:

- Remove the two security clips from the pins, and then remove the pins holding the frame in the upright position. (Refer to Picture 1 for details.)



Picture 1

1.4. Unfold the Frame:

- Slowly pull down the top of the frame.
- Continue to lower it gently until all legs are firmly on the ground.


2. Folding the Unit

2.1. Lift the Frame:

- Gradually lift the frame until it returns to the upright folded position.

2.2. Secure the Frame:

- Insert the two pins into the designated slots on the frame to lock it securely in place.
- Insert the security clips into both pins to ensure proper locking. (Refer to Picture 2 for details.)

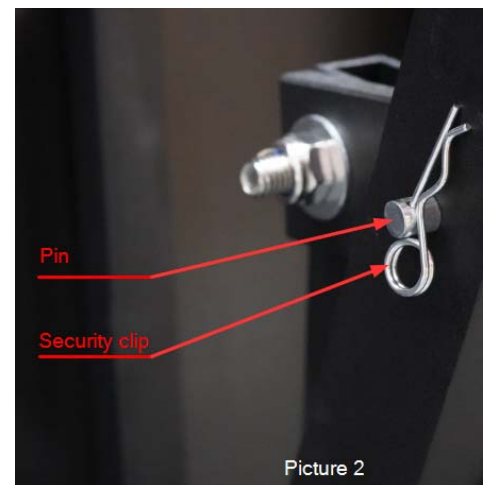

Picture 2

2.3. Unlock the Casters:

- Release the caster locks and carefully move the unit to its storage location.

Safe Working Loads

Product Code	Width x Length (mm)	Certification	Safe Working Load (SWL)
CR1.22M3	700 x 1220	Yes	750 kg/m ²

Specifications

Foldable, three-layer singing platform (Choir Riser), 1.22m wide, easy to transport, move and stock.

- Australian Engineering Certification
 - Event Structural Certificate No.: - [EVENTEC/STR/](#)
- Materials:
 - Frame Material: Steel
 - Deck Material: 18mm Plywood
- Finishing: Anti Skid Black Hex Pattern

WARRANTY

Please refer to your local dealer or please contact Eventec

Website: www.eventec.com.au