



PAR9X12BH-IP

Outdoor Battery Parcan with Wireless DMX



USER MANUAL

For your safety, please read this user manual carefully before use.

Event Lighting reserves the right to revise the manual at any time. Information and specifications within this manual are subject to change without notice. Event Lighting assumes no liability or responsibility for any errors or omissions. Please consult Event Lighting for any clarification or information regarding this item.

Version 1.0 (February 2024)

Warning


- Do not open this device, there are no user serviceable parts inside. Risk of electric shock.
- Do not look directly at the light source from close range.
- Avoid contact with the unit during operation, as the housing may become hot. Allow the fixture to cool for at least 15 minutes after turning off before touching.
- Install this device in a location with adequate ventilation, at least 50cm from adjacent surfaces.
- Do not operate this device, or connect this device to power, within 50cm of any flammable material.
- Use a safety chain when mounting this device overhead.
- Do not operate this device outdoors where excessive dust, heat, water, or humidity may affect it.
- This device is IP65 certified, meaning that it is protected against dust ingress, and protected against low pressure water jets from any direction. Ensure all protective covers are sealed correctly.
- Do not operate this device if the housing, lenses, or cables appear damaged.
- Do not connect this device to a dimmer or rheostat.
- Do not operate this device at temperatures higher than 40°C (104°F).
- **Only** connect this device to a grounded and protected circuit.
- **Only** use the hanging bracket to carry this device.
- Stop using this device immediately if a serious operating problem becomes apparent.

IMPORTANT: Only use the provided Outdoor DMX cable in the device's DMX out port. Use of other cables will cause the cable to become stuck in the port, requiring the unit to be repaired.

Product Installation

PAR9X12BH-IP can be mounted in many orientations, provided each individual device is secured by the use of the correct mounting bracket. Use a safety chain when mounting PAR9X12BH-IP overhead.

Dimensions

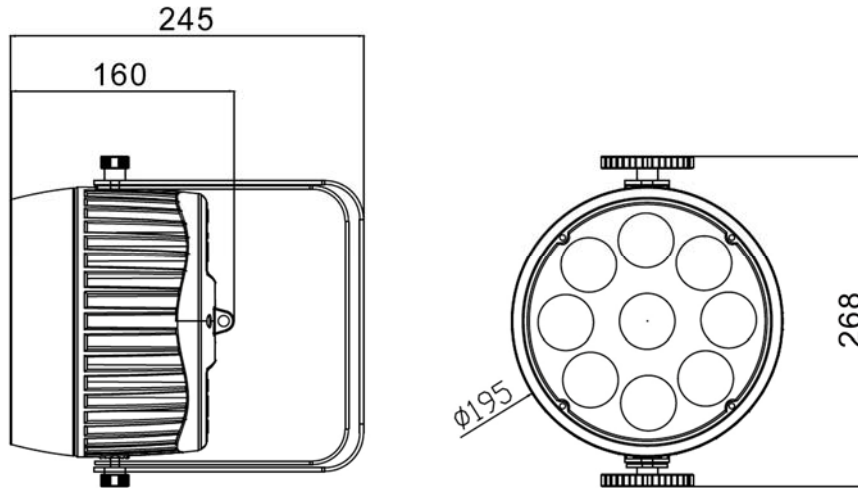

Control Operation



MENU

Button Operation



UP

Menu: Return to the previous screen.



DOWN

Up: Move selection up.

Down: Move selection down.



ENTER

Enter: Confirm the selection.

Menu

Set DMX Address Code

1. Press **Menu** until "Address Set" is highlighted then press **Enter**.
2. The screen will display "Address Set: 001". Press **Up** or **Down** to change.
3. Press **Enter** to save and exit, or press **Menu** to exit without saving.

Menu Description

Level 1	Level 2	Level 3	Description	
DMX Setting	Channel	6ch	6 channel DMX mode	
		10ch	10 channel DMX mode	
	DMX address	000-512	DMX Address Setting	
	W-DMX	On/Off	Turn Wireless DMX on or off	
	W-DMX Mode	W-DMX	Receiver	Delete Connection
			Transmitter	Delete Connection Create Connection
		EL Mode	1-6 ch	
	W_DMX-DMX	On	W-DMX signals can be transmitted to the DMX	
		Off		
	Channel List	6ch	6 channel DMX mode list	
10ch		10 channel DMX mode list		
System Setting	Display Sleep		Open/10s/20s/30s	
	Dimmer Mode	Linear		
		Square		
		Log		
	Power Setting	High		
		Normal		
		ECO		
	Button Lock	On/Off	Unlock: press button up>down>up>down>enter	
	Lost DMX	Clear	Black out the unit when DMX signal is lost	
		Hold	Maintain the last setting when DMX signal is lost.	
	Auto Power	On/Off		
IRC Setting	On/Off			
Emergency	On/Off			
Reset	Yes/No	Reset all settings to factory defaults		
Manual Control	Manual dimming	R/G/B/W/ A/UV	all colour manual dimmer (0-255)	
		Strobe	Master strobe speed(0-99)	
		Clear	Clear manual dimmer value to 000	
	Static Colour	C1-C36	Select static colour mode	
	Auto	Jump	Colour Jump mode. Adjustable speed (0-99)	
		Fade	Colour Fade mode. Adjustable speed (0-99)	
		Pulse	Colour Pulse mode. Adjustable speed (0-99)	
		Combined	Combination of Jump, Fade and Pulse. Adjustable speed (0-99)	
Timer		Setting the runtime of static colour or Auto		
Information	Work time		Working time of the model	
	Temp		Display current temperature	
	Version		Version number	
	Serial number			
	RDM UID			

DMX Chart

6-Channel Mode

Channel	Value	Function	Description
1	0-255	Red Intensity	Red 0-100%
2	0-255	Green Intensity	Green 0-100%
3	0-255	Blue Intensity	Blue 0-100%
4	0-255	White Intensity	White 0-100%
5	0-255	Amber Intensity	Amber 0-100%
6	0-255	UV Intensity	UV 0-100%

10-Channel Mode

Channel	Value	Function	Description
1	0-255	Master Dimmer	All colours 0-100%
2	0-255	Red Intensity	Red 0-100%
3	0-255	Green Intensity	Green 0-100%
4	0-255	Blue Intensity	Blue 0-100%
5	0-255	White Intensity	White 0-100%
6	0-255	Amber Intensity	Amber 0-100%
7	0-255	UV Intensity	UV 0-100%
8	0-9	Strobe	Strobe off
	10-255		Strobe speed adjustment
9	0-9	No function	
	10-50	Auto Jump	
	51-100	Auto Fade	
	101-150	Auto Pulse	
	151-200	Auto Combined	
	201-255	No function	
10	1-255	Speed of Auto programs	

Technical Specifications

Power

- Input Voltage: 100~240V AC, 50/60 Hz.
- MAX Power Consumption: 72W.
- Connection: Seetronic True1 Outdoor Power in/out.
- Battery: 16000 mAh, 12V

Photometrics

- Light Source: 9x 12W RGBWA UV LEDs.
- Beam Angle: 25°.
- PWM: 20,000 Hz
- LED Lifespan: 50,000 hours.

Effects

- Dimming: 0-100%.
- Strobe: 1-20 Hz.

Control

- Control mode: DMX512, 2.4G Wireless DMX,IR
- DMX Channels: 6 / 10.
- Interface: Outdoor 3-pin XLR in and Outdoor 3-pin XLR out.
- Built-in Programming: 4 built-in auto modes.
- Display: LCD Display with 4-button control.
- Cooling: No fan

Housing

- Materials: Die Cast Aluminium.
- Finishing: Matte Black.
- IP Rating: IP65.
- Net Weight: 4.75kg
- Overall Size: 268x195x245 mm.
- Optional: Barn Door.

IR Remote

In order to use the IR Remote, PAR9X12BH-IP must be in DMX mode without an active DMX connection. If a DMX signal is received, PAR9X12BH-IP will prioritise the DMX signal and ignore the IR Remote.

Use **On/Off** to turn PAR9X12BH-IP on or off. The current IR settings will be saved automatically when PAR9X12BH-IP is powered off and reloaded when it is turned on again. To reset to the factory default Blackout mode, long press **Off**.

Press **R/G/B/W/A/U** to light up the LEDs in red, green, blue, white, amber or UV respectively. There is also a selection of preset colours underneath the R/G/B/W/A/U buttons, known as the D Area. Press a button in the D Area to select that colour.

Press **+** to increase the intensity of the selected colour and **-** to decrease the intensity of the selected colour.

Press **Auto/Sound/Strobe** to switch on or off Auto mode, Sound Active mode and Strobe mode, respectively.

Press **Blackout** to clear all the remote settings and blackout PAR9X12BH-IP.

When PAR9X12BH-IP has been controlled by the remote control, and then use the DMX clear function, please turn off the remote control from menu IRC setting.



Warranty

Please refer to your local dealer or contact Event Lighting.

www.event-lighting.com.au