



SHOOTERGUN3

3-Barrel Handheld Confetti Shooter

USER MANUAL



For safety, please read this user manual carefully before initial use.

Event Lighting reserves the right to revise the manual at any time. Information and specifications within this manual are subject to change without notice. Event Lighting assumes no liability or responsibility for any errors or omissions. Please consult Event Lighting for any clarification or information regarding this item.

Version: 1

Safety Instructions

Warning

- Do not open this device, there are no user-serviceable parts inside.
- Do not aim the device directly towards any part of yourself or another person or other living things.
- Ensure there is at least 5 metres of space between the gun and other objects/people.
- Do not operate in any location where dust, excessive heat, water, or humidity may affect it.
- Do not operate this device if the housing or cables appear damaged.
- In case of a serious operating problem, stop using immediately.
- The maximum ambient temperature is 104° F (40° C). Do not operate this device at higher temperatures.

Usage Instructions

- SHOOTERGUN3 has three barrels which can be loaded with electric confetti tubes, such as SHOTTUBE40 or SHOTTUBE80. Longer tubes generally shoot confetti further.
- Place the confetti tubes into the barrels and connect the power cable on the gun to the shooter tube.
- Use the switches on the back of the gun to control which barrels fire.
- Pull the trigger to shoot the confetti.

SHOOTERGUN3 includes a rechargeable battery. There is a battery charge indicator on the back of the gun. To maximise the lifespan of the battery, charge the device when there is 20% battery remaining. A full charge takes 3 to 5 hours and provides enough power for approximately 1,000 shots. Battery life will vary based on charging cycles. We recommend it is not charged for any longer than 6 hours at a time and not stored flat for maximum lifespan.

Technical Specifications

- Control Mode: Manual trigger
- Confetti Capacity: 3 tubes
- Firing Distance:
 - Packed confetti: up to 8 metres
 - Loose confetti: up to 3 metres
- Input Voltage: DC 12 V, 20 W
- Battery: 3x 2,200 mAh, rechargeable
- Dimensions: 550*140*240 mm
- Net weight: 2.5 kg