



LED Pix Panel

PANX41

USER MANUAL



For safety, please read this user manual carefully before initial use.

Event Lighting reserves the right to revise the manual at any time. Information and specifications within this manual are subject to change without notice. Event Lighting assumes no liability or responsibility for any errors or omissions. Please consult Event Lighting for any clarification or information regarding this item.

Ver 3.1 (06.06.2025)

www.event-lighting.com.au

CONTENTS

Safety Instructions.....2

Product Installation.....2

Lux Chart.....3

Dimensions4

Control Board Operation5-8

DMX Chart8-12

Technical Specifications12

Warranty.....13

Safety Instructions

WARNING

- Do not open this device, there is no user-serviceable parts inside. Risk of electric shock.
- Do not look at the light source when the device is on.
- **CAUTION:** This unit's housing may be hot during and after operation.
- Install this device in a location with adequate ventilation, at least 20 inch (50 cm) from adjacent surfaces.
- Do not leave any flammable material within 50 cm of this unit while operating or connected to power.
- Use a safety chain when mounting this device overhead.
- Do not operate this device outdoors or in any location where dust, excessive heat, water, or humidity may affect it.
- Do not operate this device if the housing, lenses, or cables appear damaged.
- Do not connect this device to a dimmer or rheostat.
- **ONLY** connect this device to a grounded and protected circuit.
- **ONLY** use the hanging bracket to carry this device.
- In case of a serious operating problem, stop using immediately.
- The maximum ambient temperature is 104° F (40° C). Do not operate this device at higher temperatures.

Power Input & Power Linking

This device has an auto-switching power supply work with input voltage range of 100~240 VAC, 50/60 Hz.

Link up to the maximum 8A. DO NOT exceed this.

Fuse Replacement

If the fine-wire fuse of the device fuses, only replace the fuse by a fuse of same type and rating.

Before replacing the fuse, unplug mains lead.

Procedure:

Step 1: Unscrew the fuse holder on the rear panel with a fitting screwdriver from the housing (anticlockwise).

Step 2: Remove the old fuse from the fuse holder.

Step 3: Install the new fuse in the fuse holder.


Step 4: Replace the fuse holder in the housing and fix it.

Product Installation


This device can be mounted in many orientations provided each individual device is secured by the use of correct mounting bracket.

Use a safety chain when mounting this device overhead.

PRODUCT APPEARANCE, LUX CHART, DIMENSIONS

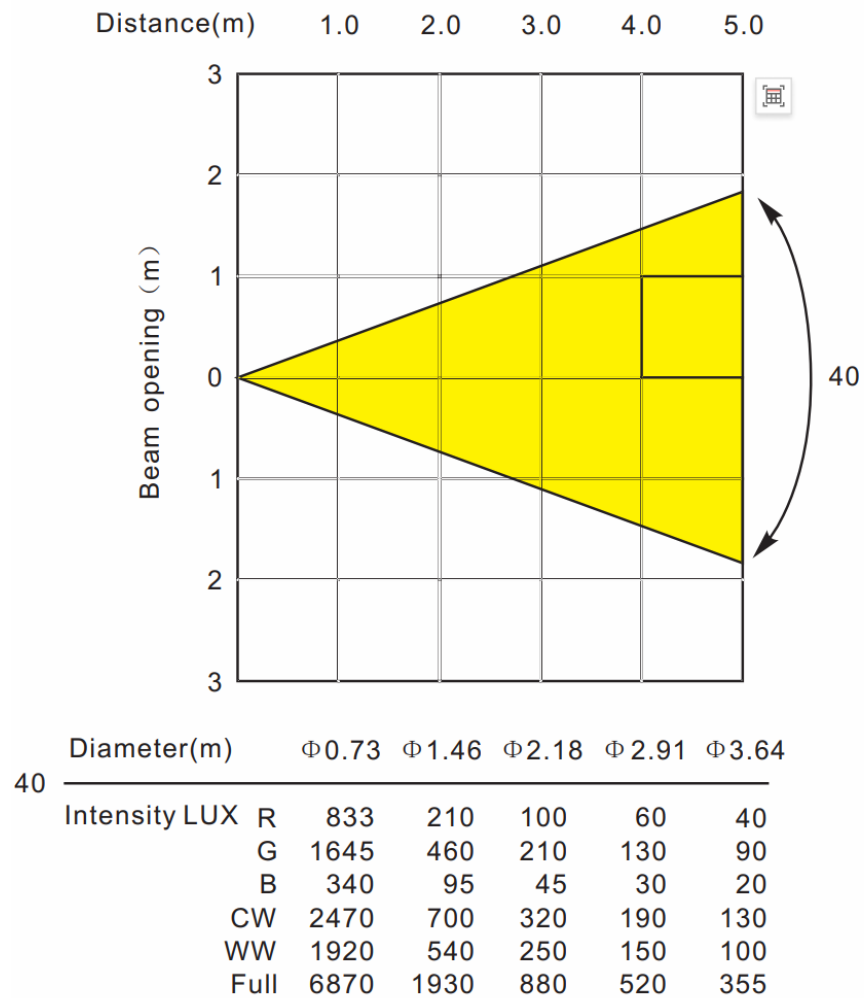

DIMENSIONS

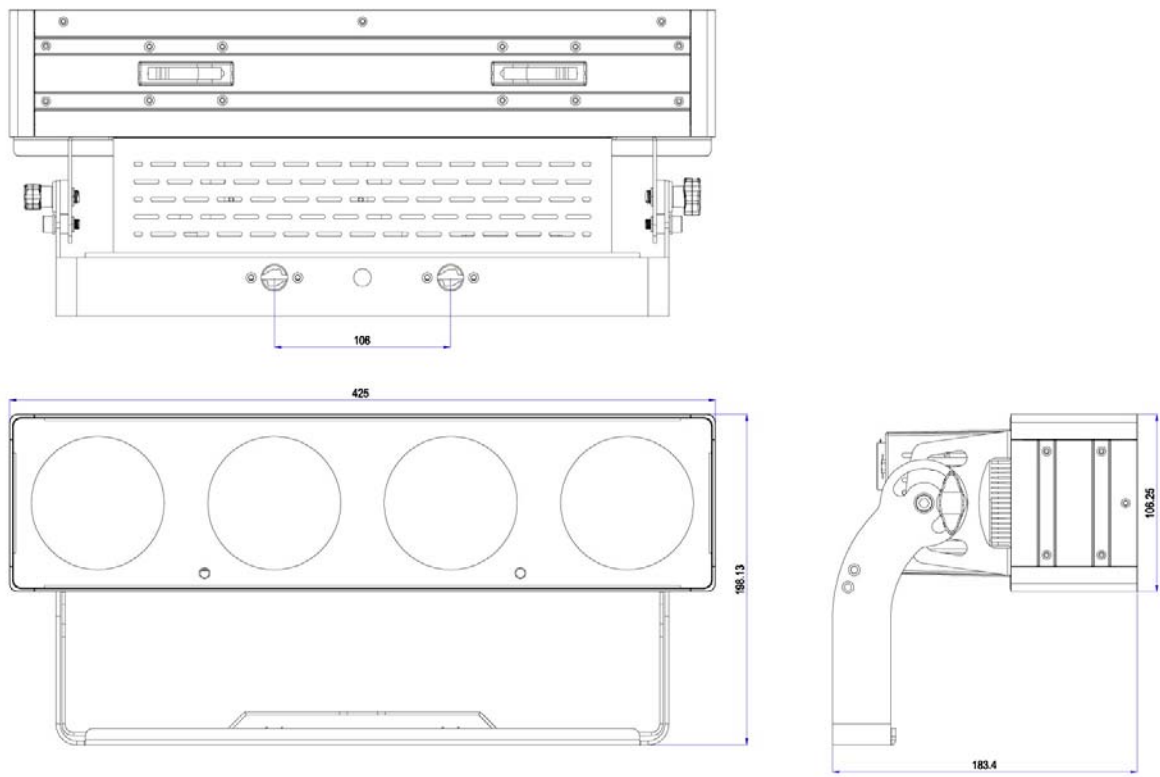

CONTROL BOARD OPERATION

| Display | Options / Values | Function |
|-----------------|---|--|
| 1.DMX Address | <001> - <512> | Set DMX address |
| 2.DMX Channel | <01> <02> <03> <4CW> <4WW> <05><08> <11> <12> <User> | Select DMX channel mode |
| 3.Dim Mode | <01> <02> <03> <04> <05> | Select dimmer curve |
| 4.DMXLoss | <Hold><Blacko><Manual><Auto> | Select mode when DMX loss |
| 5.UserDMX | CH:<01> End | Edit a user DMX mode |
| 6.Static Color | R, G, B,C,W, RG, GB, RB, RGB... | Select static colour |
| 7.Manual Color | R<000> - <255> G<000> - <255> B<000> - <255> CW<000> - <255> WW<000> - <255> Dim<000>- <255> Str<000> - <100> | Set intensity of each colour separately for color mixing and strobe rate |
| 8.Manual White | WT<01>-<11> Dim<001>-<100> | Set intensity of 11 whites |
| 9. Auto Program | <Pr01> - <Pr16> Sp<000> - <100> Dim<000> - <255> | Select built-in automatic programs, auto run speed and dimmer level |
| 10.Sound Mode | <Sen:000> - <Sen:100> | Select sound active mode and the sensitivity level from Sen:<000> to Sen:<100> |
| 11.Master/Slave | <M> <S> | Select Master/Slave modes |
| 12.Temp | Temp< xxx °C> | Indicate the current temperature of the driver PCB (Celsius degree) |
| 13.Update | <N>/ <Y> | Select to update firmware |
| | <START> | Use this fixture to update another fixture's software |
| 14.Reset | <N>/<Y> | Recover manufactory default |

DMX address

After select the "DMX Address" and press "Enter", then use "Up" and "Down" to set the desired DMX address, press "Enter" again to confirm.

DMX modes

After select the "DMX Channel" and press "Enter", then use "Up" and "Down" to set the desired DMX mode, press "Enter" again to confirm.

Dimmer curve

After select the "Dimmer Curve" and press "Enter", then use "Up" and "Down" to set the desired dimmer curve, press "Enter" again to confirm.

DMX Loss

Give users the ability to set what they want as the DMX Loss.

- By Standard ,out of the box, if in DMX mode and no signal = hold along with, if receiving DMX signal and loss = hold last signal
- Give users the ability to select, call on the menu DMX Loss then let users choose Hold (hold last signal), Blackout, Manual (last manual colour) or Auto (last Auto show selected) -

User DMX

Under this item, you can essentially pick a channel and assign a function of the DMX mode.

So for example, once 'User DMX' is selected, you can click through the channels so by default it may be the max amount of channels allocated, then you can re-arrange as you please and once you are finish, put an option to have the last channel 'End' so that it stops. Say you want 10 channels, the 11th channel would be End. making it a 10 channel user mode. Then to select this mode, under DMX Channel mode it would just be 'User'.

Set Static Colours

| Mode: | Value: | Function: |
|--------------|--------------------|--------------------|
| Static Color | Static color <R> | Red |
| | Static color <G> | Green |
| | Static color | Blue |
| | Static color <C> | White |
| | Static color <W> | Warm White |
| | Static color <RG> | Red + Green |
| | Static color <BG> | Green + Blue |
| | Static color <RB> | Red + Blue |
| | Static color <RGB> | Red + Green + Blue |

Entered "Static Color", you can select the desired solid color via the "Up" or "Down" buttons, then "Enter" to confirm.

Manual Colour mode

Entered "Manual Color" mode, use "Up" and "Down" button to select the each colour RGBWS intensity from 000 to 255, select strobe (S) speed from S000 to S100. (S000 is strobe off). Press "Enter" to save new setting.

Manual White mode

Entered "Manual White" mode, use "Up" and "Down" button to select each white intensity from 000 to 255,. Press "Enter" to save new setting.

Automatic Mode

| | |
|-------|--|
| Pr 01 | Auto Run 1 |
| Pr 02 | Auto Run 2 |
| Pr 03 | Auto Run 3 |
| Pr 04 | Auto Run 4 |
| Pr 05 | Auto Run 5 |
| Pr 06 | Auto Run 6 |
| Pr 07 | Auto Run 7 |
| Pr 08 | Auto Run 8 |
| Pr 09 | Auto Run 9 |
| Pr 10 | Auto Run 10 |
| Pr 11 | Auto Run 11 |
| Pr 12 | Auto Run 12 |
| Pr 13 | Auto Run 13 |
| Pr 14 | Auto Run 14 |
| Pr 15 | Auto Run 15 |
| Pr 16 | Auto Run 16 |
| Pr 17 | Auto Run 17 |
| Pr 18 | Auto Run 18 |
| Pr 19 | Multi fixture chases 1 |
| Pr 20 | Multi fixture chases 2 |
| Pr 21 | Multi fixture chases 3 |
| Pr 22 | Multi fixture chases 4 |
| Pr 23 | Multi fixture chases 5 |
| Pr 24 | Multi fixture chases 6 (1-5 combination) |

Set auto run Pr01 - Pr18

Entered "Auto Program" mode, use "Up" and "Down" button to select the built-in programs. Press "Enter" and use "Up" and "Down" button to select auto run speed from <Sp000> to <Sp100>. Press "Enter" and use "Up" and "Down" button to select dimmer of "Auto Program" from <dim000> - <dim255>. Press "Enter" to save new setting.

Set multi fixture chases Pr19 – Pr24

Before starting, go to each fixture and reset the menu to fixture defaults.

1. On the master unit, setup the DMX address to the total number of fixtures in the string. For example, you may have a total of 20 par cans including the master, so the DMX address should be set to "20".
2. On the master unit, go to master/slave menu setting and set the unit to master
3. On the master unit, set the unit to "Auto Mode" <Pr19> - <Pr24> which supports multi fixture chases.
4. On each slave unit, setup the DMX address to the fixture position in the string. For example, if this unit is the 2nd unit in the string including the master, then set the DMX address to 2. If this the last unit of 20, then the DMX address should be set to 20. It is possible to double up fixture positions as well as fixture 1.
5. On each slave, go to the master/slave menu setting and set it to slave.

Sound Mode

After select the "Sound mode", use "Up" and "Down" to set the sound sensitivity Sen 000 ~ Sen 100, press "Enter" to confirm.

Master/Slave Operation

1. Set the master fixture to one of the standalone operating modes: auto, sound, static color or manual color modes
2. Set the slaves, entered "Master/Slave" mode, set to "S", press "Enter"

Temperature

Select "Temp", the screen displays the current temperature of the fixture automatically.

Firmware update

Use fixture A to update fixture B's firmware

- Set fixture A to "Update" mode, select "Y" then select "START"
- Link fixture A and fixture B with DMX cable, then power up fixture B
- Press "Enter" on fixture A, fixture B's firmware will be copied from fixture A.

*Ensure that fixture A and B are of the same type, otherwise damage may occur.

* Only fixture A and B should be in the DMX chain when updating firmware.

Reset

To recover factory default, select the "Factory Set" and press "Enter", then use "Up" and "Down" to choose "Yes", press "Enter" again to confirm to recover manufactory default

DMX CHARTS

1 channels mode

| Channel | Value | Function |
|---------|---------|--|
| 1 | 000-255 | dimmer 0% ~ 100% (dim the preset color selected in Menu) |

2 channels mode

| Channel | Value | Function |
|---------|---------|--------------------------|
| 1 | 000-255 | Warm white to cool white |
| 2 | 000-255 | Dimmer 0% ~ 100% |

3 channels mode

| Channel | Value | Function |
|---------|---------|------------------|
| 1 | 000-255 | Red: 0% ~ 100% |
| 2 | 000-255 | Green: 0% ~ 100% |
| 3 | 000-255 | Blue: 0% ~ 100% |

4CW channels mode

| Channel | Value | Function |
|---------|---------|------------------|
| 1 | 000-255 | Red: 0% ~ 100% |
| 2 | 000-255 | Green: 0% ~ 100% |
| 3 | 000-255 | Blue: 0% ~ 100% |
| 4 | 000-255 | White: 0% ~ 100% |

4WW channels mode

| Channel | Value | Function |
|---------|---------|-----------------------|
| 1 | 000-255 | Red: 0% ~ 100% |
| 2 | 000-255 | Green: 0% ~ 100% |
| 3 | 000-255 | Blue: 0% ~ 100% |
| 4 | 000-255 | Warm White: 0% ~ 100% |

5 channels mode

| Channel | Value | Function |
|---------|---------|-----------------------|
| 1 | 000-255 | Red: 0% ~ 100% |
| 2 | 000-255 | Green: 0% ~ 100% |
| 3 | 000-255 | Blue: 0% ~ 100% |
| 4 | 000-255 | White: 0% ~ 100% |
| 5 | 000-255 | Warm White: 0% ~ 100% |

8 channels mode

| Channel | Value | Function |
|---------|---------|--------------------------------------|
| 1 | 000-255 | Red: 0% ~ 100% |
| 2 | 000-255 | Green: 0% ~ 100% |
| 3 | 000-255 | Blue: 0% ~ 100% |
| 4 | 000-255 | White: 0% ~ 100% |
| 5 | 000-255 | Warm White: 0% ~ 100% |
| 6 | 000-255 | Dimmer Coarse |
| 7 | 000-255 | Dimmer Fine |
| 8 | 000-015 | No function (Shutter On) |
| | 016-119 | Strobe Slow -> Fast(1-25HZ) |
| | 120-127 | No function (Shutter On) |
| | 128-183 | Strobe Random Slow -> Fast |
| | 184-191 | No function (Shutter On) |
| | 192-247 | Strobe Audio sensitivity low -> high |
| | 248-255 | No function (Shutter On) |

11 channels mode

| Channel | Value | Function |
|---------|---------|---|
| 1 | 000-255 | Red: 0% ~ 100% |
| 2 | 000-255 | Green: 0% ~ 100% |
| 3 | 000-255 | Blue: 0% ~ 100% |
| 4 | 000-255 | White: 0% ~ 100% |
| 5 | 000-255 | Warm White: 0% ~ 100% |
| 6 | 000-255 | Master Dimmer 0% ~ 100% |
| 7 | 000-015 | No function (Shutter On) |
| | 016-119 | Strobe Slow -> Fast(1-25HZ) |
| | 120-127 | No function (Shutter On) |
| | 128-183 | Strobe Random Slow -> Fast |
| | 184-191 | No function (Shutter On) |
| | 192-247 | Strobe Audio sensitivity low -> high |
| | 248-255 | No function (Shutter On) |
| 8 | 000-019 | No Function |
| | 020-039 | RED 100% / GREEN 0% ~ 100% / BLUE 0% |
| | 040-059 | RED 100% ~ 0% / GREEN 100% / BLUE 0% |
| | 060-079 | RED 0% / GREEN 100% / BLUE 0% ~ 100% |
| | 080-099 | RED 0% / GREEN 100% ~ 0% / BLUE 100% |
| | 100-119 | RED 0% ~ 100% / GREEN 0% / BLUE 100% |
| | 120-139 | RED 100% / GREEN 0% / BLUE 100% ~ 0% |
| | 140-159 | RED 100% / GREEN 0% ~ 100% / BLUE 0% ~ 100% |
| | 160-179 | RED 100%~ 0% / GREEN 100% ~ 0% / BLUE 100% |
| | 180-200 | RED 100% / GREEN 100% / BLUE 100% |
| | 201-204 | Color Temperature 1 |
| | 205-209 | Color Temperature 2 |
| | 210-214 | Color Temperature 3 |
| | 215-219 | Color Temperature 4 |
| | 220-224 | Color Temperature 5 |
| | 225-229 | Color Temperature 6 |
| | 230-234 | Color Temperature 7 |
| | 235-239 | Color Temperature 8 |
| | 240-244 | Color Temperature 9 |
| | 245-249 | Color Temperature 10 |
| | 250-255 | Color Temperature 11 |
| 9 | 000-009 | No Function |
| | 010-021 | Auto Run 1 |
| | 022-034 | Auto Run 2 |
| | 035-047 | Auto Run 3 |
| | 048-060 | Auto Run 4 |
| | 061-073 | Auto Run 5 |

Warm
↓
Cool

| | | |
|----|---------|---|
| | 074-086 | Auto Run 6 |
| | 087-099 | Auto Run 7 |
| | 100-112 | Auto Run 8 |
| | 113-125 | Auto Run 9 |
| | 126-138 | Auto Run 10 |
| | 139-151 | Auto Run 11 |
| | 152-164 | Auto Run 12 |
| | 165-177 | Auto Run 13 |
| | 178-190 | Auto Run 14 |
| | 191-203 | Auto Run 15 |
| | 204-216 | Auto Run 16 |
| | 217-229 | Auto Run 17 |
| | 230-242 | Auto Run 18 |
| | 243-255 | Sound active mode |
| 10 | 000-255 | Speed of ch9 auto programs (slow ~ fast) or sound sensitivity |
| 11 | 000-009 | Use dimmer curve from setting of control board |
| | 010-057 | Dimmer Curve 1 |
| | 058-106 | Dimmer Curve 2 |
| | 107-155 | Dimmer Curve 3 |
| | 156-204 | Dimmer Curve 4 |
| | 205-255 | Dimmer Curve 5 |

22 channels mode

| Channel | Value | Function |
|---------|---------|-----------------------------|
| 1 | 000-255 | LED 1 Red: 0% ~ 100% |
| 2 | 000-255 | LED 1 Green: 0% ~ 100% |
| 3 | 000-255 | LED 1 Blue: 0% ~ 100% |
| 4 | 000-255 | LED 1 White: 0% ~ 100% |
| 5 | 000-255 | LED 1 Warm White: 0% ~ 100% |
| 6 | 000-255 | LED 2 Red: 0% ~ 100% |
| 7 | 000-255 | LED 2 Green: 0% ~ 100% |
| 8 | 000-255 | LED 2 Blue: 0% ~ 100% |
| 9 | 000-255 | LED 2 White: 0% ~ 100% |
| 10 | 000-255 | LED 2 Warm White: 0% ~ 100% |
| 11 | 000-255 | LED 3 Red: 0% ~ 100% |
| 12 | 000-255 | LED 3 Green: 0% ~ 100% |
| 13 | 000-255 | LED 3 Blue: 0% ~ 100% |
| 14 | 000-255 | LED 3 White: 0% ~ 100% |
| 15 | 000-255 | LED 3 Warm White: 0% ~ 100% |
| 16 | 000-255 | LED 4 Red: 0% ~ 100% |
| 17 | 000-255 | LED 4 Green: 0% ~ 100% |

| | | |
|-----------|---------|--------------------------------------|
| 18 | 000-255 | LED 4 Blue: 0% ~ 100% |
| 19 | 000-255 | LED 4 White: 0% ~ 100% |
| 20 | 000-255 | LED 4 Warm White: 0% ~ 100% |
| 21 | 000-255 | Master Dimmer 0% ~ 100% |
| 22 | 000-015 | No function (Shutter On) |
| | 016-119 | Strobe Slow -> Fast(1-25HZ) |
| | 120-127 | No function (Shutter On) |
| | 128-183 | Strobe Random Slow -> Fast |
| | 184-191 | No function (Shutter On) |
| | 192-247 | Strobe Audio sensitivity low -> high |
| | 248-255 | No function (Shutter On) |

TECHNICAL SPECIFICATIONS

Power

- Input Voltages: 100V~240V AC,50/60Hz
- Power Consumption: 120W
- Power Connection:Seetronic Power Input and Output Connection
- Fuse: T 2 A, 250 V

Photometrics

- Light Source: 4 pcs 40W RGBVW(White, warm White) COB LEDs
- Beam Angle: 40°
- Field Angle: 60°
- Output: 1930 lux @2.0 M RGBWS full on
- PWM: 1200 Hz
- LED Life: 50,000 hours

Effects

- Dimming: 5 16bit digital Dimming Curves
- Strobe: 1 - 25 Hz

Control

- Operational Modes: Static, Color Fade, Auto Program, Sound Active, Multi Fixture Chases, Master / Slave & DMX Modes,RDM, WDMX(Optional)
- Display: 4-button LCD Display Control Panel
- DMX Protocol: DMX512
- DMX Channel Mode: 1 / 2 / 3 / 4CW / 4WW / 8 / 11 /22
- DMX Interface: 5-Pin (Optional 3-Pin XLR)
- Software Upgrade via DMX: Yes

Housing

- Housing Materials: Aluminium Housing
- Housing finish: Matte Black
- Cooling: Fanless Cooling
- Dimension: 425 x 197 x 183 mm
- Net Weight: 4.3 kg

WARRANTY

Please refer to your local dealer or please contact Event Lighting Pty Ltd

Website: www.event-lighting.com.au